FILEMATE®

wintecind.com/FileMateIdentity

IDENTITY

TOMORROW CONNECTED

User Guide

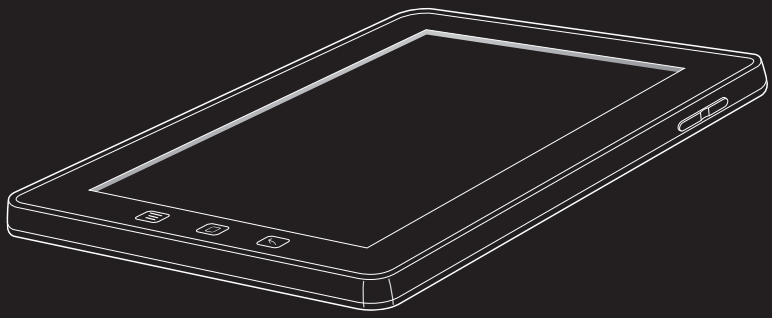

CONTENTS

4 Before Getting Started

5 Safety Precautions
7 Using IDENTITY tab Safely
7 Symbols in the Manual
8 Features of IDENTITY tab
10 Product, Accessories & Optional Components
10 Product and accessories
11 Optional components
12 IDENTITY tab Exterior
12 Frontal view of IDENTITY tab
12 Rear view of IDENTITY tab
13 Top and bottom view of IDENTITY tab
13 Holding IDENTITY tab Correctly
14 Charging the Battery

16 Basic Functions

17 Turning On/ Turning Off/ Resetting
17 Turning on
17 Turning off
18 Resetting
18 Button Functions
19 Home Screen
22 Using the Touchscreen
22 Precautions before use
22 Tapping
23 Tapping and holding down
24 Dragging
25 Enlargement
25 Reduction
26 Entering Text – Keyboard
26 Editing text
27 Executing Functions
27 Execution functions on the Home screen
28 Usage by screen display
31 Adjusting the Volume
32 Connecting the Accessories
32 Connecting the earphones
33 Inserting / removing the SD card
34 Connecting the External Devices
34 Connecting to a computer
35 Connecting to an external USB storage device
36 Connecting to an HDMI device

40 Other Features

41 Talk
42 Talk settings
43 Maps
44 Market
45 Address Book
46 Managing the address book
47 Sending an email
48 Gallery
49 Managing pictures and video files
50 Video
50 Caption settings
51 Music
52 Playing music
52 Deleting music
53 Photo
53 Editing pictures
54 My Album settings
54 Slideshow
55 Task Manager
55 Ending applications
56 Clock

56 Set Alarm
57 ThinkFree Office
58 File Manager
59 Twitter
60 ConvergenceOne™
60 Installing ConvergenceOne™ on a PC
62 Playing multimedia contents using a PC
63 Program screen
64 Playing multimedia contents using IDENTITY tab
66 Email
66 Setting up an email account
68 Adding an email account
68 Setting up your work email
69 Deleting an email account
70 Browser
71 Camera

72 **Settings**

73 Wireless & networks
74 Sound
75 Display
76 Location & security
77 Applications
78 Account & Sync
79 Privacy
80 SD card & device storage
81 Search
82 Select language
83 Android keyboard
84 Date & Time
85 About system

86 **Index**

87 Managing Data on IDENTITY tab
88 Specifications and Features
90 Copyright / Authentication, Trademark / Exemption Clause
90 Copyright
90 Trademark
90 Exemption clause
90 Internet Service Types
91 Troubleshooting
94 Warranty Statement and After-Sales Service
96 Index

Before Getting Started

Safety Precautions
Using IDENTITY tab Safely
Symbols in the Manual
Features of IDENTITY tab
Product, Accessories & Optional Components
IDENTITY tab Exterior
Holding IDENTITY tab Correctly
Charging the Battery

Safety Precautions

Class B Device (Residential Broadcasting and Communications Device): IDENTITY tab is for residential environments (Class B) and is certified for EMC (Electromagnetic Compatibility). This device is used mainly in residential environments, and can be used in all regions.

⚠ Warning

Breaching this safety instruction may result in death or major injury to the user.

ⓘ Caution

Breaching this safety instruction may result in minor injury to the use and product damage.

⚠ For safe and proper use of the product, avoid the following places.

- Places close to home appliances, such as a TV, audio equipment, or a refrigerator.
- Places affected by heat or direct sunlight.
- Steel structures or places enclosed with thick walls.
- Dusty places.
- Wet or damp places.

⚠ Turn off IDENTITY tab in places where use of radio devices is prohibited.

- A problem or danger may occur with relation to radio waves.
- Turn off IDENTITY tab when boarding an airplane. The radio waves emitting from IDENTITY tab may affect the electronic aviation systems and endanger the airplane.
- Turn off IDENTITY tab in a hospital. The radio waves emitting from IDENTITY tab may affect medical equipment.

⚠ Precaution when using the power

- Do not pull out the adapter cord or touch the power plug with wet hands.
- Do not connect many power plugs into the same extension cord.
- Do not use a damaged power cord, a damaged plug or a loose power outlet.
- Do not use IDENTITY tab in areas with a high temperature or humidity.
- IDENTITY tab can be broken when you drop or impact it strongly.
- Do not disassemble, repair, or modify your IDENTITY tab arbitrarily.
- Do not paint or put a sticker on your IDENTITY tab.

Safety Precautions

⚠ Precautions for battery use

- Do not disassemble the battery, put it in the mouth, or eat it (also keep away from pets).
- Ensure that no leaked battery fluid comes into contact with the eyes, skin, or cloth.
- Do not impact the battery or make a hole in it with a sharp object.
- Do not peel the surface of the battery or modify it.
- Ensure that the battery is charged with a standard charger that is certified by government-designated authorities.
- Do not impact the battery or disassemble arbitrarily.
- If an uncertified battery is used, it may explode.
- Do not place the battery in the vicinity of heat sources (heater, microwave, etc.). Do not leave the battery in a sauna where the temperature is very high or heat the battery up.
- Ensure that the battery charging terminals do not make contact with metal substances.

(!) Precautions when using the product

- Do not drop or impact IDENTITY tab.
- Ensure that IDENTITY tab is always used or kept in a clean area.
- Do not leave IDENTITY tab in a humid, dusty, or sooty area.
- Use a smooth cloth soaked with a neutral detergent when you clean your IDENTITY tab and the charger.
- The IDENTITY tab battery may have discharged spontaneously during distribution. If this happened, charge the battery for more than 5 hours before use.

(!) Other precautions

- Please learn how to use the antenna properly. Do not touch the antenna or the area where the antenna is embedded, otherwise battery consumption may increase.
- If the same screen is displayed continuously, an afterimage may appear.
- If a protective film or a sticker is stuck on the screen, the touchscreen may malfunction.

Using IDENTITY tab Safely

- Do not download suspicious applications.
- Do not visit unreliable websites.
- Delete suspicious messages and mails sent by unidentified senders.
- Use the password-setting function and change your password regularly.
- Only turn on wireless interfaces, such as Bluetooth when necessary.
- If an abnormal symptom continues, check if your IDENTITY tab is affected by malicious codes.
- Execute a virus check before using a downloaded file.
- Install an anti-virus application and execute a virus check regularly on the external devices connected to your IDENTITY tab.
- Do not modify the structure of the platform.
- Update the OS and anti-virus appplication to the latest version at all times.

Symbols in the Manual

Note

Additional description of the corresponding function or cautions when you use the function

To Execute

Description of the order of execution

Descripton of the connecting menu for the corresponding function or relevant functions.

Features of IDENTITY tab

IDENTITY tab is an HMHD (Home Media Hub Device) for future media convergence.

The market's best specification of 1 GHz CPU
A new 1 GHz ARM Coretex-A8-based multimedia processor processes 3D graphics and HD videos quickly.

7" WVGA TFT LCD Screen
Provides a natural and clear resolution for magazines, animations, and HD videos, Internet web pages, etc.

GPS, a G sensor, a light sensor, and various other sensors are incorporated.
Convenient functions are provided, using the GPS, G sensor and light sensor. You can use services, such as maps and augmented reality, by tracking your location.

Multi Touch / Full Capacitive Touch Screen
A touch method that utilizes the static electricity of the human body is used. Various operations are available with multiple touch points.
The response of the device to touch can be set in accordance with the number of touch points. Operations are available by adjusting the touch point gaps.

SD Card Slot / USB Host / Slave Mini Slot
You can save and manage your data easily in the SD card. You can also send and manage your data using the USB cable.

Micro-HDMI
You can connect digital devices to your IDENTITY tab more easily and quickly using the HDMI cable for high quality images and sound.

Wi-Fi
You can use an ultra high speed Internet or communications service within a certain distance from where an AP (Access Point) is installed.

Bluetooth
Convenient functions are provided, using Bluetooth. Enjoy videos and musics with a Bluetooth headset.

Camera
You can take pictures with a 3M pixel camera.

Smart Search
You can use various search engines. You can easily and quickly check various and accurate search results.

3.5 Ø Earphones
You can enjoy high-quality live sound effects with the 3.5 Ø earphones without using a jack converter.

Google Market
You can download and use various applications by Google market.

Product, Accessories & Optional Components

Product and accessories



Simple IDENTITY tab

USB cable for charging the IDENTITY tab battery and connecting external devices to IDENTITY tab

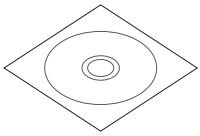

CD-ROM
(User Manual, Installation Program)



Portable pouch for protecting IDENTITY tab from scratches or external impacts

IDENTITY tab earphones that provide superior sound quality

Quick Start Guide for users to quickly use the functions of IDENTITY tab



5-pin power adapter



Cleaning cloth for cleaning IDENTITY tab

- The above items comprise the product and the accessories inside the package when you purchase the product.
- The images of the product and the accessories may differ from the actual product and its accessories. Some accessories are subject to change.

Optional components

A protective film, a premium pouch and mount, a small mount, a silicon urethane case, a car mount, etc.

- The earphones that come with your IDENTITY tab are only for use with IDENTITY tab, so they may not be compatible with cellular phones or MP3 players.
- Using the accessories that come with your IDENTITY tab will deliver you the best performance.
- When purchasing optional components, first check if they are compatible with your IDENTITY tab and use only registered parts.
- Some optional components are subject to change, depending on the circumstances.
- Please be aware that Enspert shall not assume responsibility for the decreased lifespan or failure of your IDENTITY tab resulting from using non-authorized optional components.
- For improving its performance, the exterior and specifications of IDENTITY tab are subject to change without prior notice. The sale of optional components is subject to change depending on circumstance. For further information on the optional components, please visit the Enspert website (http://www.identitytab.com).

IDENTITY tab Exterior

Frontal view of IDENTITY tab

❶	Power Button
❷	Touchscreen
❸	Light Sensor
❹	Menu Button
❺	Home Button
❻	Previous Button
❼	Volume Button

- You can connect the power adapter and the USB cable, which is included in the package, to IDENTITY tab.
- Touching the Wi-Fi antenna area while using Wi-Fi and Bluetooth may reduce the quality of communication or increase the consumption of the battery.
- The IDENTITY tab touchscreen is coated with an anti-fingerprint film to prevent fingerprints.

Rear view of IDENTITY tab

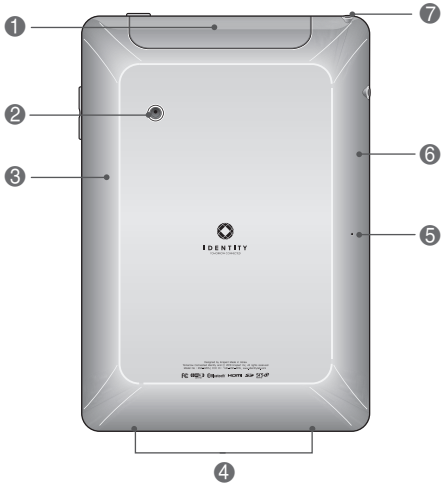

❶	Port Cover
❷	Camera
❸	GPS Antenna
❹	Speakers
❺	Microphone
❻	Wi-Fi Antenna
❼	Earphones Jack

Top and bottom view of IDENTITY tab

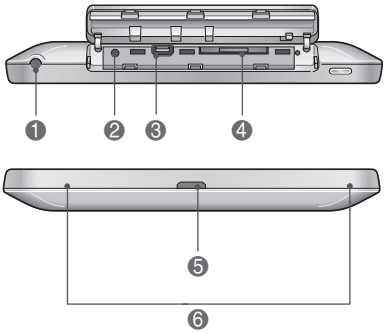

1	Earphones Jack
2	Reset Button
3	micro-HDMI Port
4	SD Card Slot
5	Mini USB Port (Charging)
6	Speakers

Holding IDENTITY tab Correctly

When using your IDENTITY tab, hold it correctly as shown in the figure below.

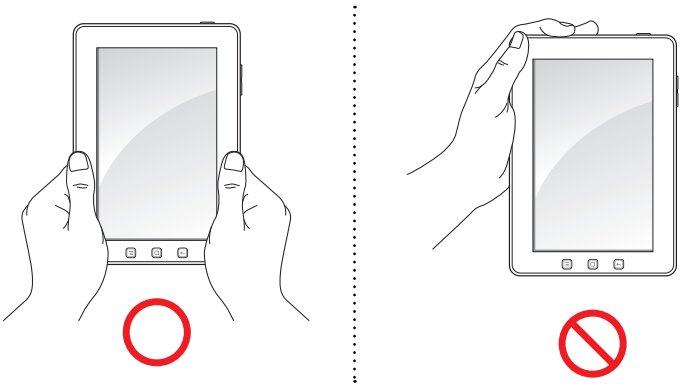

- Touching the area where the Wi-Fi antenna is embedded during data communication may reduce the quality of communication or increase the consumption of the battery.
- Using accessories such as metallic stickers around the area where the Wi-Fi antenna is embedded may reduce the quality of communication or increase the consumption of the battery.

Charging the Battery

The IDENTITY tab battery can be charged by connecting it to the USB power adapter or the USB cable.

1 To charge the IDENTITY tab battery, open the USB port cover and connect the USB power adapter or the USB cable to IDENTITY tab in the correct direction.

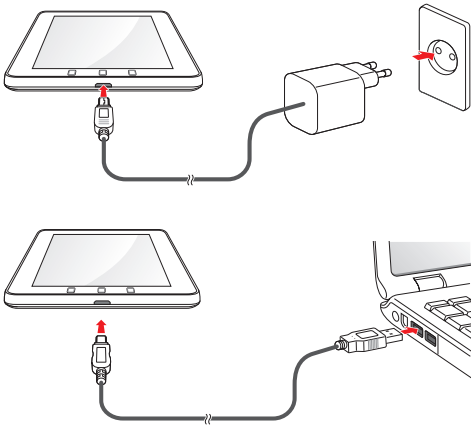

[Connect the 5-pin power adapter or the USB cable to charge the battery]

When you start charging the battery, the battery icon is displayed at the top of the screen.

2 When the IDENTITY tab battery is charged, disconnect the power adapter or the USB cable from IDENTITY tab.

- When the battery is charged using the 5-pin power adapter, disconnect the adapter from IDENTITY tab or disconnect the power cable.
- You can also charge the IDENTITY tab battery using the USB cable that came with IDENTITY tab when you purchased it. Connect the USB cable to your IDENTITY tab USB port and to the USB port on your PC or laptop computer. However, the IDENTITY tab battery may not be charged when the USB cable is connected to the USB port on certain devices, such as the audio sets of some automobiles and TV set-top boxes.
- The IDENTITY tab battery may be charged slowly when using the USB cable. (The battery may drain when enjoy multimedia, such as watching a video, due to the slowly charging speed.)
- It is recommended that you charge the IDENTITY tab battery sufficiently when you use your IDENTITY tab again after not using it for an extended length of time.
- If you charge the fully discharged IDENTITY tab battery, the IDENTITY tab power will not turn on immediately.

- IDENTITY tab has an internal 4100mAh rechargeable Li-polymer battery. Do not disassemble your IDENTITY tab and touch the battery.
- The IDENTITY tab battery is a consumable part, so its lifespan decreases slowly.

Basic Functions

Turning On/ Turning Off/ Resetting
Button Functions
Home Screen
Using the Touchscreen
Entering Text – Keyboard
Executing Functions
Adjusting the Volume
Connecting the Accessories
Connecting to External Devices

Turning On/ Turning Off/ Resetting

Turning on

1 Press and hold down the **Power button** to turn on IDENTITY tab.

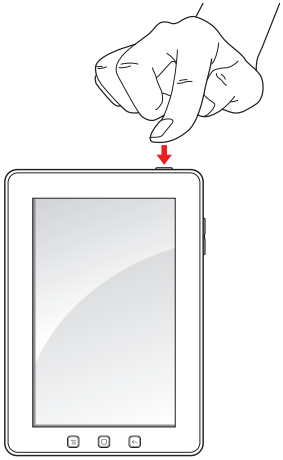

Turning off

1 Press and hold down the **Power button** to turn off IDENTITY tab.

Resetting

If errors occur while using IDENTITY tab and IDENTITY tab does not work properly, refer to the image below and reset the system by pressing the **Reset button** with a thin, long metal object, such as a ballpoint pen. You can reset IDENTITY tab without any loss of the application or the data saved in the SD card memory.

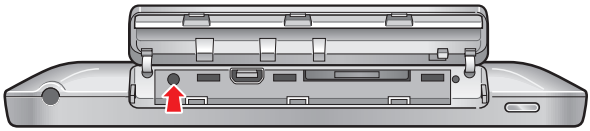

Button Functions

Button	Name	Function
	Power	Turns on or off the screen.
	Menu	Opens the corresponding, linked munu
	Home	Returns to the Home screen Executes the last menu when this button is pressed and held down.
	Previous	Returns to the previous menu.
	Volume	Adjust the volume. Sets to the Silent mode when this button is pressed and held down.
	Reset	Resets IDENTITY tab.

Home Screen

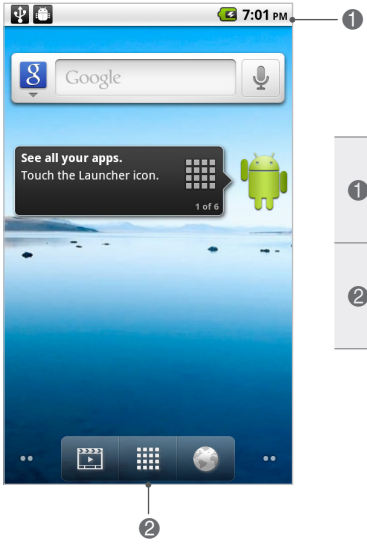

❶	**Status bar** The status icon, the notification icon, and the current time are displayed on the status bar.
❷	**Application** You can view the list of application on the main menu screen and use them.

Menus on the Home screen

Tap the **Menu button** on the Home screen or an application screen to use various menu functions.

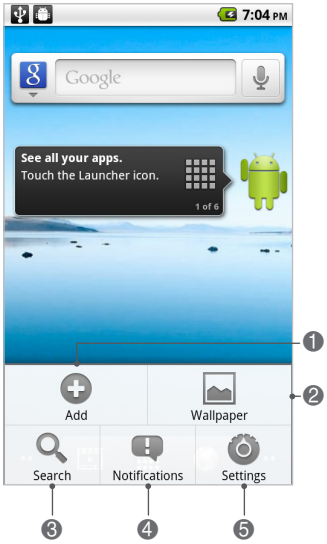

❶	**Add**	**Shortcuts, widgets** and **folders** can be added. The background of the Home screen can be changed to wallpapers you want.
❷	**Wallpaper**	The wallpaper for the Home screen can be changed.
❸	**Search**	You can search for files saved in the menu or IDENTITY tab, or by linking to Google.
❹	**Notifications**	Notifications can be viewed.
❺	**Settings**	The setting functions can be used.

Checking the notification indication

Information on the communication services and notifications on the functions you are using can be checked. If you drag the status bar downwards on the Home screen or while using the menu, the notification screen appears.

You can **delete** all the notifications by tapping Delete.

Icons at the top of the screen

Email		A new email is received.
Battery		The battery needs to be charged.
		Remaining battery level
		The battery is being charged.
		The battery is not recognized.
Wi-Fi		An open Wi-Fi network can be used.
		Wi-Fi connection status
Warning		System warning
		The internal memory capacity is low.
		SD card warning
Status		USB connection status
		Uploading to the Market
		Downloading from the Market
Schedule		Schedule registration status
Alarm		Alarm setting status
Bluetooth		Bluetooth connection setting
		Connecting Bluetooth.
Synchronizing		Synchronizing
		Synchronizing warning
Playback		Playing music

Using the Touchscreen

Precautions before use

- IDENTITY tab has a capacitive touchscreen that is operated by detecting a very small amount of current in the human body.
  - Do not press the screen hard with a plastic pen.
- Do not press the touchscreen hard.
  - The sensors may be damaged when they are pressed too hard or excessive pressure is applied to them.
- Ensure that no substances with electric current make contact with the touchscreen.
  - The touchscreen may not work properly due to electrical stimulation, such as static electricity.
- Do not use the touchscreen in a humid place. If there is water on the touchscreen, remove it before use.
  - The touch sensors may not work properly.
- The touch sensors may not work properly when LCD protective films or accessories, which are available on the market, are attached to the touchscreen.

Tapping

You can select or execute a function by tapping a desired menu or item.

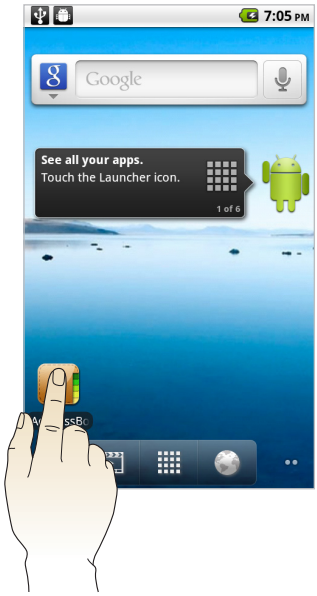

Tapping and holding down

You can check additional options by tapping and holding down a desired menu or item.

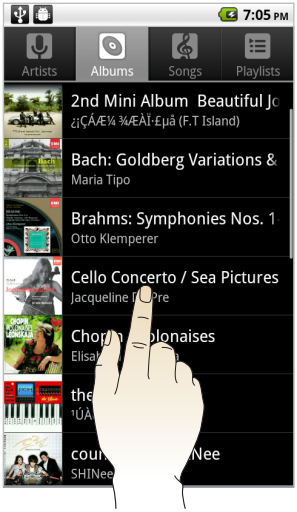

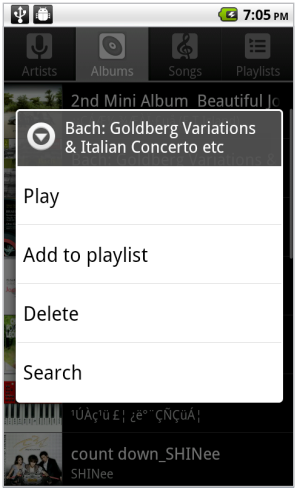

Dragging

Drag the item you want to move to a desired location on the screen.

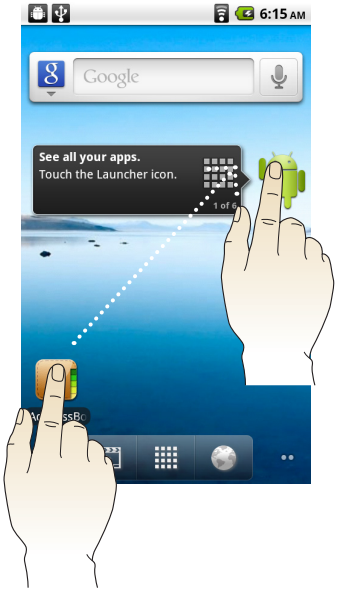

[Moving and deleting an icon]

[Switching between the screens]

Enlargement

Tap the screen with two fingers and drag them outwards to enlarge the screen.

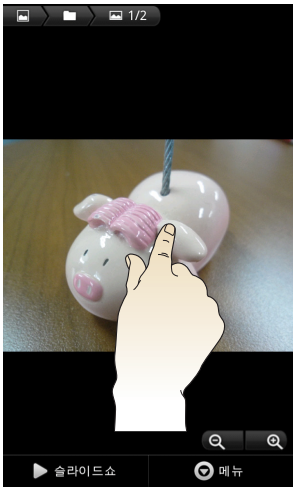

Reduction

Tap the screen with two fingers and drag them inwards to reduce the screen.

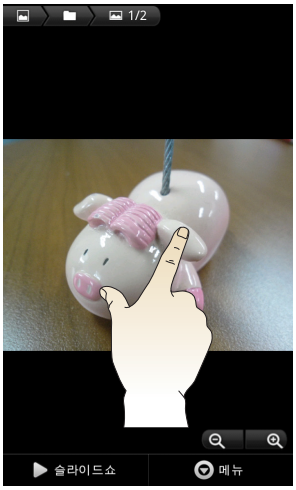

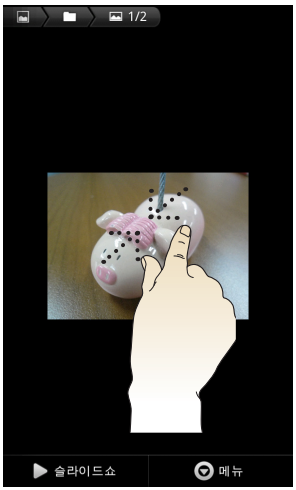

Entering Text – Keyboard

You can enter English letters, numbers, and symbols using the QWERTY keyboard.

DEL	Deletes a character right before the cursor.
␣	Leaves a space.
?123	Number/ symbol entry mode
⇧	English lower case entry mode
⬆	English upper case entry mode (only the first entered character is applicable)
⬆	English upper case entry mode (continuously applicable)

Tapping and holding down or double-tapping ⇧ will switch to ⬆.

Editing text

When tapping and holding down a character you entered, a menu for editing appears. You can cut, copy, or paste it.

Select all	Selects all the characters you entered.
Select text	Selects some characters you entered.
Cut all	Cuts selected characters or all the characters you entered.
Copy all	Copy selected characters or all the characters you entered.
Paste	Pastes copied characters.
Input method	Change the Entering text method. (Keyboard)
Add "" to dictionary**	Add selected characters to dictionary database.

You can set the keyboard in Settings. For further information, see "Android keyboard" on page 83.

Executing Functions

Execution functions on the Home screen

Adding icons

You can add frequently-used functions as icons.

1 Tap and hold down a blank space on the screen or tap the **Menu button** and select 'Add'.

2 Tap the shortcut and then select a function to add.

Adding Widgets

You can add widgets.

1 Tap and hold down a blank space on the screen or tap the **Menu button** and select 'Add'.

2 Tap Widget and select a widget to add.

Deleting icons and widgets

1 Tap and hold down an icon or a widget to delete.

2 Drag the icon or the widget for deletion onto the recycle bin, and then retract your finger.

Executing on the main menu screen

You can execute a function that you want quickly.
When an application is installed, it is added to the main menu screen.

■ To execute

Home Screen

Usage by screen display

When a scroll bar is displayed

When a scroll bar is displayed due to many items, you can scroll up and down the screen to check all the items.

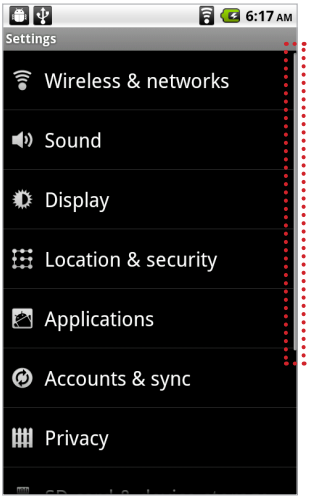

When tabs are displayed

When tabs are displayed, you can select a desired tab.

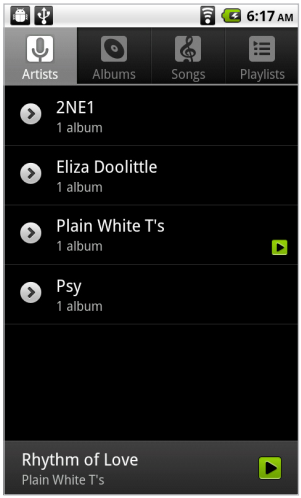

When ✓s are displayed

When ✓s are displayed, you can set or unset the function.

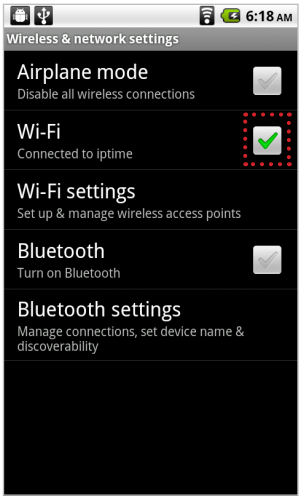

When ▼s are displayed

When ▼s are displayed, you can set the detail options.

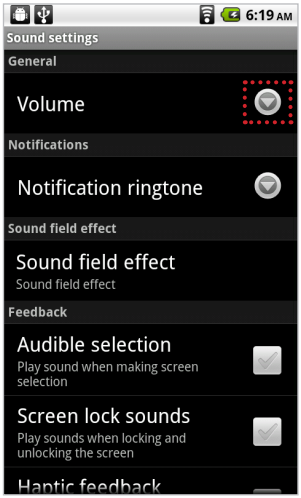

is displayed

When you select an item from among multiple items, is displayed. When the item is selected, is displayed.

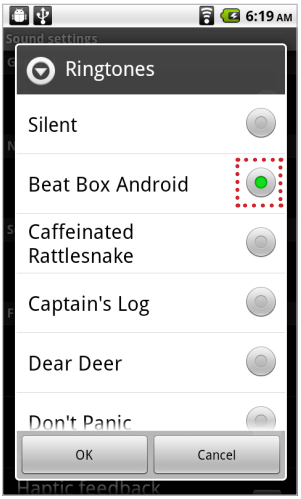

When a control bar is displayed

When fine-tuning is necessary, tap and hold down the control bar and drag it to the left or right for adjustment.

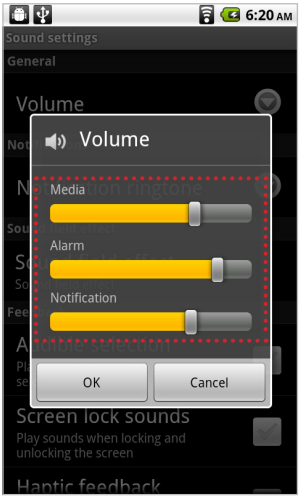

Adjusting the Volume

Use the volume buttons at the right top of IDENTITY tab to adjust the volume.

Press the volume buttons quickly to adjust the volume. In **Settings** > **Sounds**, you can set the Silent mode, media volume, function sound effects, listening to selected items, SD card notification and notification sounds and sound effects. For further information, see **Sounds** on page 74.

The volume may differ even for the same content. MP3 files are customized for the features of IDENTITY tab, its design specifications, and customer requirements.

Note

- SRS WOW HD™ (Sound Retrieval System): You can enjoy live stereophonic sound as if you were in a movie theater or a concert hall. You can use this function when listening to music or watching a movie.
- SRS WOW HD™ is a package with many technologies and is custom designed to reproduce natural audio, thereby producing close-to-original sounds.
- SRS WOW HD™ offers dynamic 3-dimensional sound with a clear high frequency bandwidth for rich base and clear details. When audio is played, the sound quality improves significantly.

Connecting the Accessories

Connecting the earphones

Connect the earphones into the earphones jack on your IDENTITY tab.

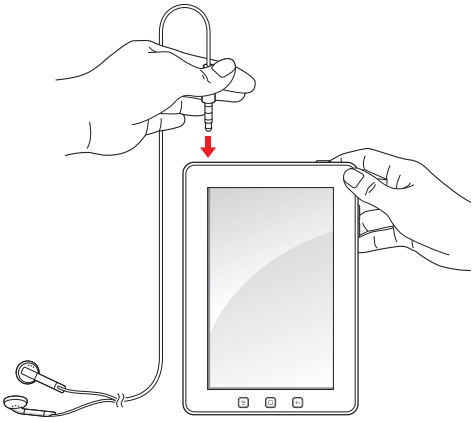

- When you use the earphones, you may not hear external sounds. For your safety, do not use the earphones where there is potential danger. If you use the earphones at a high volume while you are walking or driving, it may distract you and cause an accident.
- If you use the earphones at a high volume for an extended length of time, they may affect your ears.
- The earphones that came with your IDENTITY tab are only for IDENTITY tab (4 pins), so they may not be compatible with other products.
- If you need to use extra earphones, purchase 4-pin earphones. IDENTITY tab is optimized for 4-pin earphones.

Inserting / removing the SD card

1 Open the plug cover.

2 Face the SD card upwards as shown in the figure and push it into the slot slowly until it makes a clicking sound.

3 If you push the inserted SD card once again, the SD card is detached.

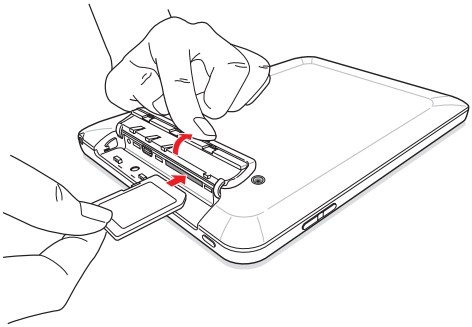

- Do not apply excessive force when inserting the SD card.
- Do not remove the SD card while the SD card is in use.
  Doing so may delete the data or cause malfunctioning of IDENTITY tab.
- If the SD card is inserted in the opposite direction, IDENTITY tab may fail or the SD card may not be removed.
- If the SD card is not recognized or causes malfunctioning, format the SD card before use.
- It is recommended that you format the SD card using the FAT system.
- The SD card is not included in the accessories. You need to buy an SD card separately.
- The data storage path of the SD card is "/sdcard/sd".
- Wintec Industries recommends SD cards that are class 4 or lower with the Identity Tab.

Connecting the External Devices

Connecting to a computer

1 Connect the one end of the USB cable to the USB Host/Slave Mini port on IDENTITY tab and the other end to a computer.

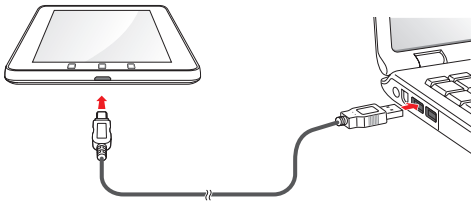

- You can copy, delete, or manage files on your IDENTITY tab and PC.
- IDENTITY tab has similar functions to a PC, but it may have functional differences and some functions may not be supported.
- Before disconnecting the USB cable, execute "Safe Hardware Removal" on your PC.
- When you connect the USB cable into a PC USB port, the IDENTITY tab battery starts charging automatically. However, when there is no power at the USB port, the IDENTITY tab battery is not charged.
- When the USB cable is connected, the icon appears at the top of the screen.

Connecting to an external USB storage device

1 Connect the one end of the USB cable to the USB Host/Slave Mini port on IDENTITY tab and the other end to an external device.

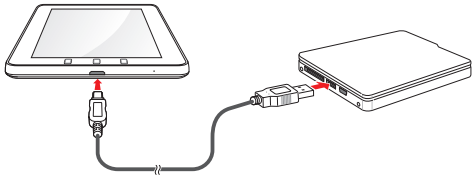

- Some products (digital cameras and external HDDs) that require separate installation of a driver or some products (multi card readers) or require creation of multiple drivers may not be supported.
- Some products requiring separate power may not be supported.
- Only FAT formatting is available for an external HDD.
- When the USB cable is connected, the icon appears at the top of the screen.

Connecting to an HDMI device

Use the micro-HDMI port on IDENTITY tab to display images on your external digital devices, such as a TV, cellular phone or monitor.

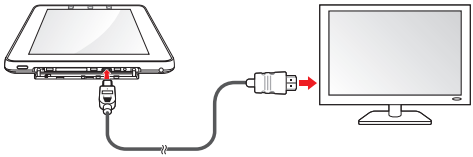

1 Connect the micro-HDMI port on the right side of your IDENTITY tab to an external digital device (TV, cellular phone, monitor).

2 When the connection is complete, turn on your IDENTITY tab and the external digital device (TV, cellular phone, monitor).

- When you connect to an external digital device using the micro-HDMI port, you can enjoy superior resolution and sound quality.
- The micro-HDMI port supports digital image and audio signals, so an extra audio signal cable is not necessary.
- If an external digital device does not support HDMI input, you cannot use the micro-HDMI port.
- In **Settings**, you can set the HDMI output. For further information, see **Display** on page 75.

Memo

Other Features

Talk
Maps
Market
Address Book
Gallery
Video
Music
Photo
Task Manager
Clock
ThinkFree Office
File Manager
Twitter
ConvergenceOne™
Email
Browser
Camera

Talk

You can chat freely with your friends by using a Google account, and you don't need to install an additional program or sign up for membership. Register your Google account prior to use.

■ To execute

Home Screen ⁛ ⁛ Talk ⁛ Select the desired ID.

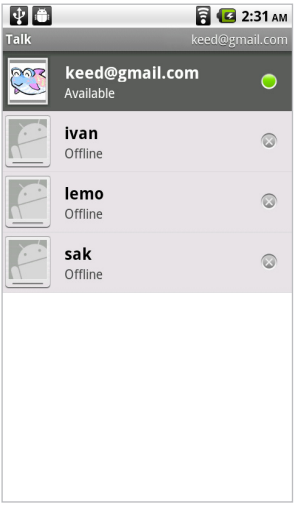

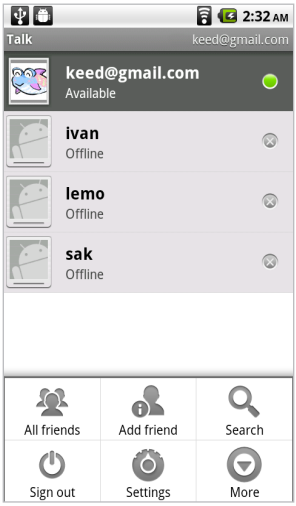

All friends	Shows all your friends registered in Talk.
Add friend	Allows you to add a friend via an email invitation.
Search	Allows you to search for a friend.
Sign out	Allows you to log out of the account in use and end Talk.
Settings	Allows you to set the Away status and the notification sound.
More > Close all chats	Allows you to close the chat window in use.
More > Invites	Shows a list of friends who have been invited and are pending confirmation.
More > Blocked	Shows a list of friends who have been blocked from chatting.

Talk settings

■ To execute

Home Screen ⁘ ⁘ Talk ⁘ Select the desired email address.

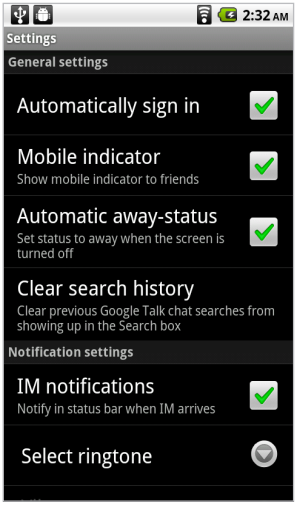
2:32 AM
Settings
General settings
Automatically sign in
Mobile indicator
Show mobile indicator to friends
Automatic away-status
Set status to away when the screen is turned off
Clear search history
Clear previous Google Talk chat searches from showing up in the Search box
Notification settings
IM notifications
Notify in status bar when IM arrives
Select ringtone

General settings	Automatically sign in	Allows you to set the automatic log-in for the specified account.
	Mobile indicator	Shows your log-in status to registered friends.
	Automatic away-status	Allows you to set the status to Away when the screen is changed to Protected mode and is turned off.
	Clear search history	Allows you to clear previous chat search words in the search box so as not to show them.
Notifications settings	IM notifications	Displays a notification in the status bar when a message arrives from a registered friend.
	Select ringtone	Allow you to specify the notification ringtone.
	Vibrate	Allows you to specify vibration for notification.
About	Term & privacy	Shows Google's legal disclaimer.

Maps

You can search for a desired location based on GPS or you can view various location information. You can view the driving route from your current location to your destination, find public transportation routes and view an outline map for walking. You can also view the map through a web search for the location and through satellite images.

■ To execute

Home Screen ⁛ > Maps ⁛ Select a desired location.

- Drag the screen to the top/ bottom/ left/ right with your finger to move the map.
- Tap the screen twice to enlarge the map.
- Press and hold down the desired location on the map to view its address.

Search	Allows you to search for a desired location and shows it on the map.
Directions	Allows you to select from the car, public transportation or pedestrian navigation functions.
Starred Places	Shows the map with map layers such as traffic information, and satellite images and geographical features.
Clear Map	Allows you to clear all location information on the map.
Join Latitude	Shows your current location.
More	Shows information such as labs, Help and Terms, Privacy & notices.

Market

Market is an application market dedicated to Google. You can download various applications onto your device, including games.

■ To execute

Home Screen ⁛ ▦ ⁛ **Market** ⁛ Select a desired application.

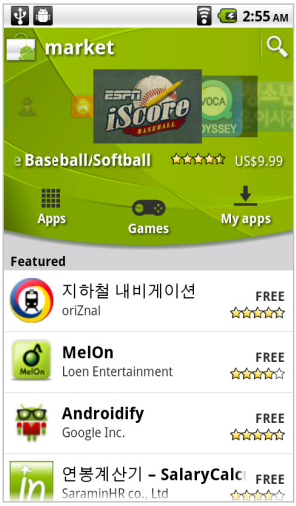

Search	Allows you to search for a desired application.
My apps	Shows a list of applications which have been downloaded and installed on your device.
Settings	Allows you to set a notification if there is an update on installed applications or games.
Help	Allows you to search for and view Help about Market by connecting to the Internet.

Address Book

You can save and search for various information, such as telephone numbers and email addresses. You can also select an email address and send an email.

■ To execute

Home Screen > > **Address Book**

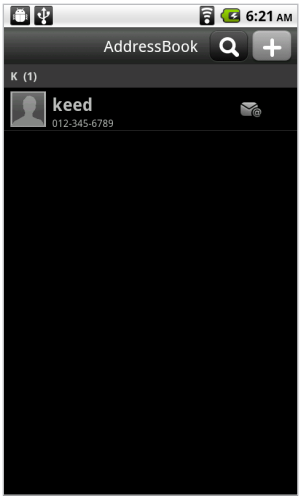

Managing the address book

Adding a new contact

■ To execute

Address list ⁚ + ⁚ Enter contact details to add ⁚ **Save**

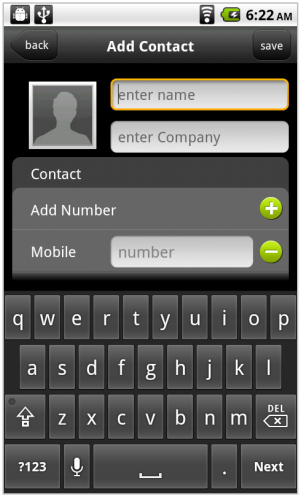

Editing a contact

■ To execute

Address list ⁚ Select a contact to edit ⁚ **Edit** ⁚ Enter contents to edit ⁚ **Save**

Deleting a contact

■ To execute

Address list ⁚ Menu Button ⁚ Delete ⁚ Select a contact to delete (or Select all) ⁚ Delete

Sending an email

■ To execute

Address list ⁛ Select an email address to send an email to.

■ or

Address list ⁛ Select the email address you want ⁛ **Send the email**

- You need to set up an email account to send an email. For further information on how to set up an email account, see **"Email"** on page 66~69.
- To send an email, your Wi-Fi should be connected. For further information on how to connect Wi-Fi, see **"Wireless & networks"** on page 73.

Gallery

You can view and manage the pictures and videos saved in the memory. You can view the pictures in a slideshow or edit them.

■ To execute

Home Screen > > **Gallery**

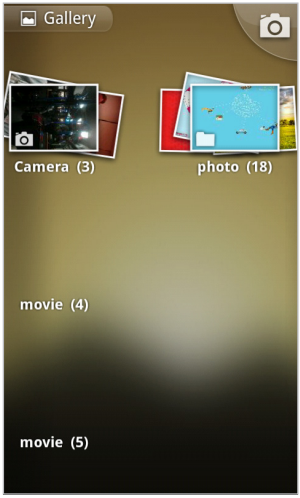

- When selecting at the top right of the screen, you can change the sorting method to 'By date' or 'Preview'.
- Dragging the screen to the left or right, you can check the file collection that is sorted by folder.
- Tap to use the camera function.

Managing pictures and video files

1 Select the folder you want on the Gallery screen.

- If you press the **Menu button** twice, you can either select all the files, or select files individually for **sharing**, **deleting**, or to perform **other tasks.**
- You can check all the folders by dragging the screen to the left or right.

2 Select the picture or video you want.

- When you select a video file, the screen returns to the previous screen after the video file is played.
- When you select a picture file, a menu appears that allows you to play a **slideshow** or to **share**, **delete**, or perform **other tasks**.
- You can view the files saved in the selected folder by dragging the screen to the left or right.

Select All	You can share, delete, or perform other tasks by selecting all the files saved in a folder.
Deselect All	You can cancel the Select All task.
Share	You can share the selected file via Bluetooth.
Delete	You can delete the selected file.
Other Tasks	▪ **Details**: You can check the information on the selected file. ▪ **Set As**: You can set the selected picture as a wallpaper or an icon for contacts. ▪ **Crop**: You can cut the selected picture to the size you want. ▪ **Rotate to the left**: You can rotate the selected picture to the left. ▪ **Rotate to the right**: You can rotate the selected picture to the right. Only **Details** for video files can be checked.

Video

You can watch videos using the flash player. You can search for the video files saved in the memory.

■ To execute

Home Screen ⁛ ⁛ **Video**

Supported file formats

- File formats: mp4, avi, wmv, 3gp, k3g, ak3g
- Resolution: 1024 x 720

Caption settings

■ To execute

While a video is playing ⁛ **Menu button** ⁛ **Settings** ⁛ Select the item you want.

You can add widgets on the Home screen. For further information on how to add widgets, see **"Executing Functions"** on page 27

Music

You can enjoy your music with the Player.

■ To execute

Home Screen ⁛ ⁛ **Music**

Album	You can sort your music by album title.
Song	You can view the entire list of saved music.
Artist	You can sort your music by artist name.
Play List	A list of the music that was recently added is displayed, and you can check it in the widget.

You can add widgets on the Home screen. For further information on how to add widgets, see **"Executing Functions"** on page 27

Playing music

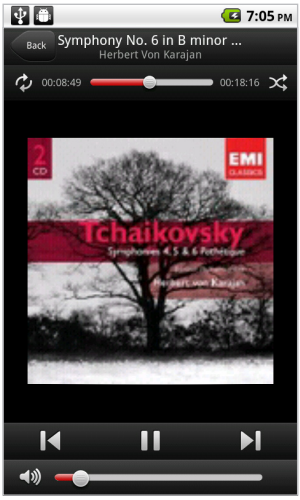

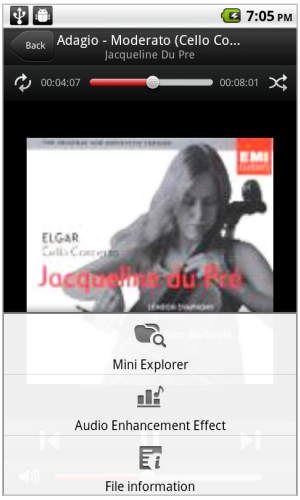

Press and hold down the **Menu button** to set the functions.

Mini Explorer	You can search the memory.
Audio Enhancement Effect	You can set the sound effects.
File Information	You can check the file information.

- Only MP3 files are supported.
- For further information on the equalizer, see **"Sound"** on page 74.
- Even if you switch to the Home screen while playing music, the music continues to play in background mode. To pause the music, tap the Pause button on the screen.
- When playing music, appears at the top of the screen.

Deleting music

■ To execute

Music List ⁚· **Menu button** ⁚· **Delete** ⁚· Select a song to delete ⁚· **Delete**

■ or

Music Playback Screen ⁚· **Menu button** ⁚· **Delete** ⁚· Select a song to delete ⁚· **Delete**

Photo

You can enjoy your pictures in a slideshow or manage the pictures you want by album.

■ To execute

Home Screen ⁚ ⁚ **Photo**

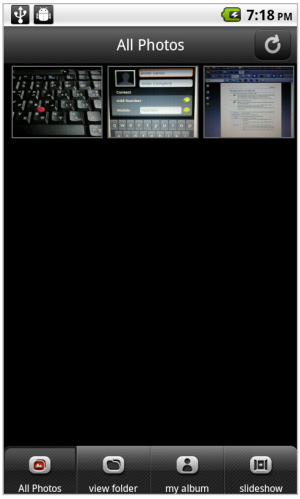

All Photos	You can view all the saved pictures.
view Folder	You can view the pictures by folder.
my Album	You can manage the pictures you want by adding albums.
slideshow	You can enjoy a slideshow.

Editing pictures

You can rotate a picture and apply filter effects using many functions. You can also cut the area you want.

■ To execute

All Pictures ⁚ ⁚ Select the pictures you want ⁚ ⁚ **Menu button** ⁚ ⁚ **More** ⁚ ⁚ **Edit**

- Edited pictures are saved in new files.
- You can add widgets on the Home screen. For further information on how to add widgets, see **"Executing Functions"** on the page 27

My Album settings

Adding albums

■ To execute

Album List Screen ⁚· [+] ⁚· Enter the album name ⁚· **Ok** ⁚· Select a picture ⁚· **Complete**

Deleting albums

■ To execute

Album List Screen ⁚· **Menu button** ⁚· **Delete Individually** (or **Delete All**) ⁚· Select an album to delete ⁚· **Complete** ⁚· **Ok**

Slideshow

You can set a function by pressing the **Menu button** during a slideshow.

show setup	You can set the screen switch speed of a slideshow, the slide effects and the background music.
File Information	You can check the information on the pictures.
Delete	You can delete the pictures displayed on the screen.
Wallpaper	You can set wallpaper to the picture.

Task Manager

You can view a list of the currently used applications and the memory capacity, as well as the installed applications.

■ To execute

Home Screen ⁚ ⁚ **Task Manager**

■ or

Press and hold down the **Home button** ⁚ **Task Manager**

Ending applications

You can increase the available memory capacity by closing any applications that are running.

■ To execute

List of the applications that are running ⁚ **End all**

■ or

List of the applications that are running ⁚ **End**

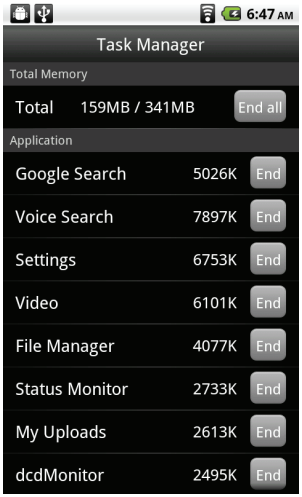

- Android, the OS, uses the memory, so the total memory is not displayed as 512MB. This is not a hardware fault.

Clock

You can set the alarm according to your desired setting time.

■ To execute

Home Screen ⁛ ⁛ **Alarm Clock**

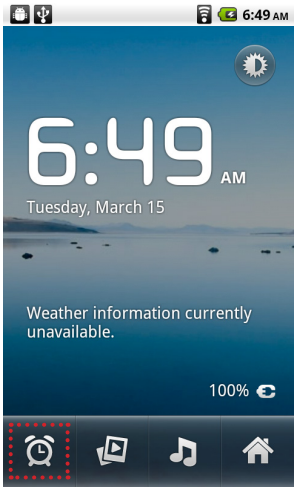

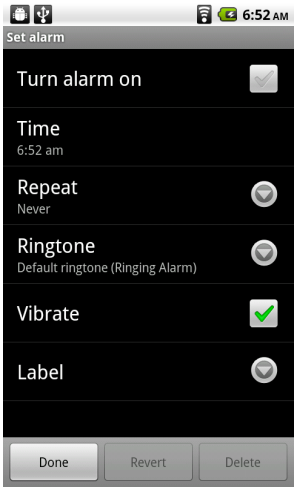

When the Alarm Clock is set, appears at the top of the screen.

Set Alarm

You can set alarm with time, Ringtone, Vibrate, Repeat, and Label. You can also change the alarm setting value you want.

Turn alarm on	You can set alarm.
Time	You can set desire time to alarm.
Repeat	You can set repeat function by day of the week. (Monday ~ Sunday)
Ringtone	You can set desire ringtone. (Silent, BeeBeep Alarm, Beep-Beep-Beep Alarm, Buzzer Alarm, Piezo Alarm, Ringing Alarm, and Rooster Alarm)
Vibrate	You can choose vibrate function except ringtone.
Label	You can write label.

ThinkFree Office

ThinkFree Office is an office package that is compatible with Microsoft Office and allows you to manage your documents online and offline. You can view or edit various Office files (PDF, Text, Word, Excel, Power Point) saved in the SD card (external memory card). If you have an account on the ThinkFree website, you can also manage your documents online.

■ To execute

Home Screen ⁚ ⁚ **ThinkFree Office**

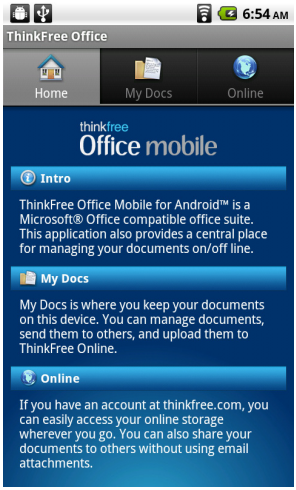
6:54 AM
ThinkFree Office
Home
My Docs
Online
thinkfree
Office mobile
Intro
ThinkFree Office Mobile for Android™ is a Microsoft® Office compatible office suite. This application also provides a central place for managing your documents on/off line.
My Docs
My Docs is where you keep your documents on this device. You can manage documents, send them to others, and upload them to ThinkFree Online.
Online
If you have an account at thinkfree.com, you can easily access your online storage wherever you go. You can also share your documents to others without using email attachments.

If you want to manage your documents online on the ThinkFree website, your Wi-Fi should be connected. For further information on how to set up the Wi-Fi for IDENTITY tab, see **"Wireless & networks"** on page 69.

File Manager

You can manage the files and folders saved on the memory card.

■ To execute

Home Screen ⁘ ⁘ File Manager

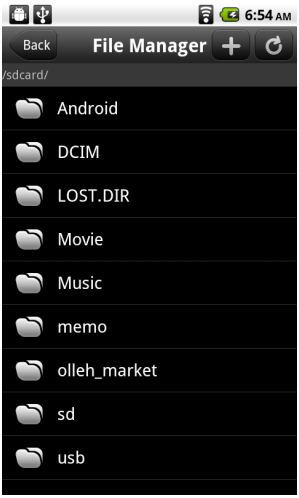

Press and hold down the **Menu button** to set the functions.

Copy	You can copy the files and folders you want.
Move	You can move the files and folders you want.
Delete	You can delete the files and folders you want.
Sort by	You can sort the files and folders by **name**, **size**, and **date**.
Service Info.	You can view the application information.

Twitter

You can enjoy Twitter, a representative social networking service. You can communicate with many people through real-time messaging.

■ To execute

Home Screen ⁚› ⁚› **Twitter**

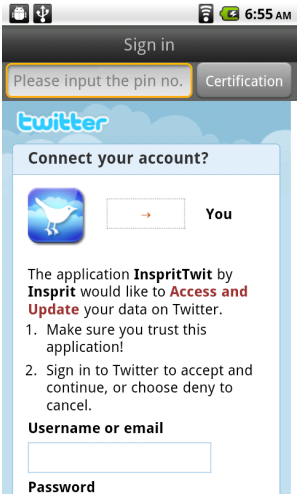
6:55 AM
Sign in
Please input the pin no.
Certification
twitter
Connect your account?
You
The application InspritTwit by Insprit would like to Access and Update your data on Twitter.
1. Make sure you trust this application!
2. Sign in to Twitter to accept and continue, or choose deny to cancel.
Username or email
Password

- You need to set up a Twitter account.
- You can add widgets on the Home screen. For further information regarding how to add widgets, see **"Executing Functions"** on page 27.

ConvergenceOne™

Using ConvergenceOne™, you can share multimedia contents on various digital devices via a wireless network. You can make your IDENTITY tab interoperate with your PC and TV that support the DLNA function, and share and enjoy the contents. You need to connect to Wi-Fi to use ConvergenceOne™.

- Devices that will share Wi-Fi need to use the same AP (Access Point). If the devices use different APs, then they may not be found.
- To make your IDENTITY tab interoperate with your TV, ensure that the TV supports the DLNA (Digital Living Network Alliance) function. See the User Manual on how to set TV networks.
- If many devices are connected to the same router or other devices use a lot of network bandwidths, HD videos may not be reproduced smoothly.
- If firewalls, such as anti-virus applications are activated, the PC you want to connect to may not be found.
- For further information on how to set up the Wi-Fi for IDENTITY tab, see **"Wireless & networks"** on the page 73.

Installing ConvergenceOne™ on a PC

System requirements

- OS: Microsoft Windows XP, Windows Vista, Windows 7
- Hard drive disk space needed to install the application: 15 MB
- If you use the UAC (User Account Control) on Windows Vista, you will need to allow access when executing the application.

You can use the PC installation program on the CD that came with your IDENTITY tab, or download it from the IDENTITY tab website (http://www.wintecind.com/support_center/Downloads/index.html).

1 Double-click the installation file (ConvergenceOne_Setup) on the CD.

2 Complete the installation by following the installation precedures.

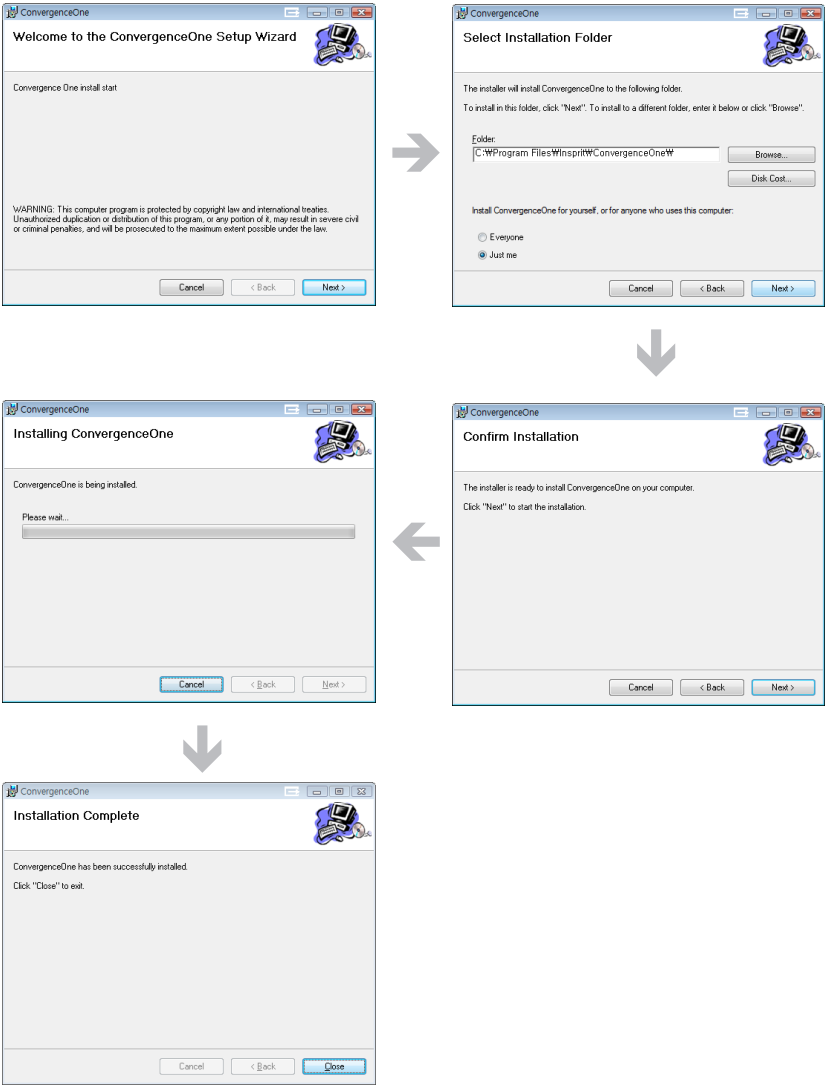
ConvergenceOne
Welcome to the ConvergenceOne Setup Wizard
Convergence One install start
WARNING: This computer program is protected by copyright law and international treaties. Unauthorized duplication or distribution of this program, or any portion of it, may result in severe civil or criminal penalties, and will be prosecuted to the maximum extent possible under the law.
Cancel
< Back
Next >
ConvergenceOne
Select Installation Folder
The installer will install ConvergenceOne to the following folder.
To install in this folder, click "Next". To install to a different folder, enter it below or click "Browse".
Folder:
C:₩Program Files₩Insprit₩ConvergenceOne₩
Browse...
Disk Cost...
Install ConvergenceOne for yourself, or for anyone who uses this computer:
Everyone
Just me
Cancel
< Back
Next >
ConvergenceOne
Confirm Installation
The installer is ready to install ConvergenceOne on your computer.
Click "Next" to start the installation.
Cancel
< Back
Next >
ConvergenceOne
Installing ConvergenceOne
ConvergenceOne is being installed.
Please wait...
Cancel
< Back
Next >
ConvergenceOne
Installation Complete
ConvergenceOne has been successfully installed.
Click "Close" to exit.
Cancel
< Back
Close

Playing multimedia contents using a PC

1 Execute **ConvergenceOne™** on your PC.

2 Set a folder with the multimedia content you want to share.

3 Select a device (PC) that contains multimedia contents (pictures, music, videos) to play.

4 Select some multimedia content to enjoy.

Only shared files are displayed.

5 Click the **Play** button on the right side of the screen.

6 Select a device to play the multimedia content.

7 The selected multimedia content plays.

Program screen

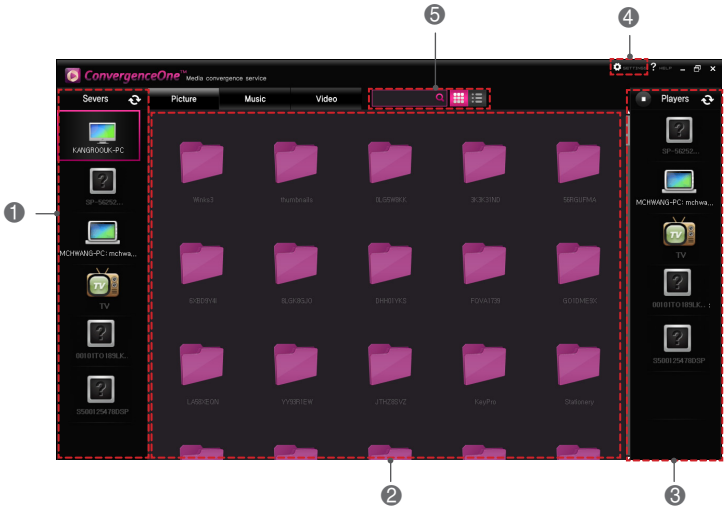

❶	You can select the device where the multimedia contents (pictures, music, videos) to share are saved.
❷	A list of the pictures, music, and videos on the storage device are displayed.
❸	You can select a device to play multimedia contents.
❹	You can set the file view mode or change a folder to share.
❺	You can search for the saved multimedia contents, and set the file view mode.

Playing multimedia contents using IDENTITY tab

1 Execute **ConvergenceOne™**.

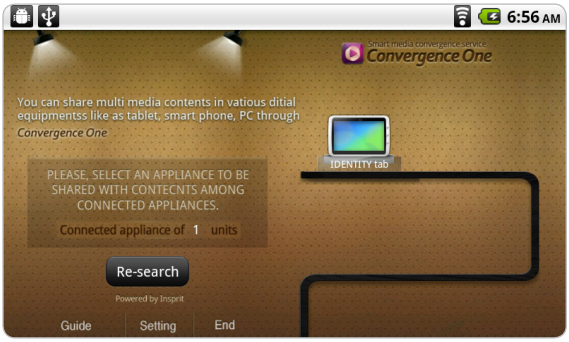
6:56 AM
Smart media convergence service
Convergence One
You can share multi media contents in vatious ditial equipmentss like as tablet, smart phone, PC through Convergence One
IDENTITY tab
PLEASE, SELECT AN APPLIANCE TO BE SHARED WITH CONTECNTS AMONG CONNECTED APPLIANCES.
Connected appliance of 1 units
Re-search
Powered by Insprit
Guide
Setting
End

A device that can be connected is searched automatically. If there is no device that you want, tap the Search Again button to **try again**.

2 Select a device **(IDENTITY tab)** that contains multimedia contents (pictures, music, videos) to play.

3 Select some multimedia content to enjoy, and tap the View (or Listen) button.

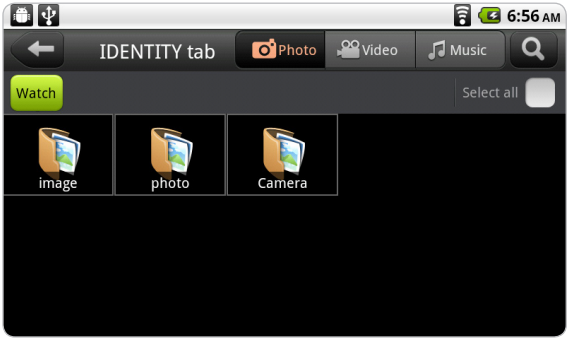

4 Select a device to play the multimedia content.

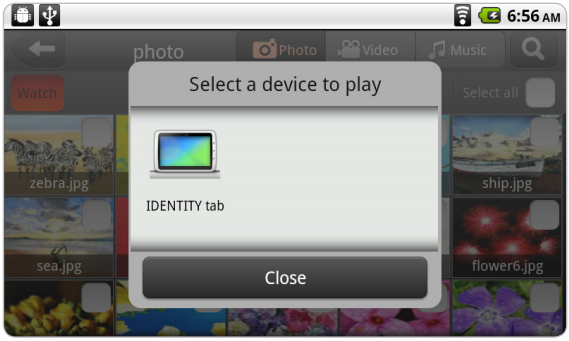

5 The multimedia content is played on the selected device.

Email

You can send or receive emails by synchronizing email accounts you are using on the Internet. Register your email accounts before use.

■ To execute

Home Screen Email

To use the email, your Wi-Fi should be connected. For further information on how to connect the Wi-Fi, see **"Wireless & networks"** on page 73

Setting up an email account

When using the email function for the first time, you need to set up an account. You can also set up some widely used email accounts (hotmail, gmail, etc).

List of the email providers

- Gmail (Gmail.com, googlemail.com, google.com, android.com)
- AOL (aol.com)
- Hotmail (hotmail.com, live.com, msn.com)
- Yahoo (yahoo.com, ymail.com, yahoo.co.kr)

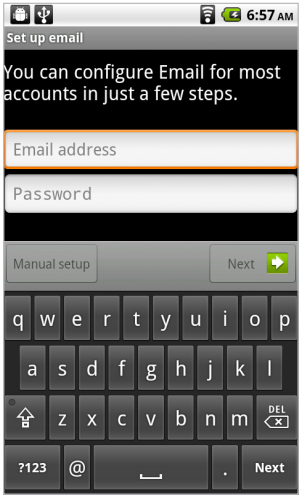
6:57 AM
Set up email
You can configure Email for most accounts in just a few steps.
Email address
Password
Manual setup
Next
q w e r t y u i o p
a s d f g h j k l
z x c v b n m DEL
?123 @ . Next

1 Enter an email address by tapping the email address box.

2 Enter the password in the password box, and then tap **Next**.

- If you fail to connect to the server through the automatic registration, go back to the email setup screen and tap **Manual Setting**.
- If you fail to connect to the server due to entering an incorrect user name or password, tap **Edit Details** and try again by re-entering your user name and password correctly.
- When the automatic registration is complete, the account type selection screen does not appear. You can set the name for your account and sent messages directly.

3 When the screen for selecting an account type appears, select **POP3** or **IMAP**.

4 Enter the receiving and sending server setting information, and then tap **Next**.

5 Set the name for your account and sent messages, and then tap **Complete**.

Adding an email account

You can register more than one email account.

■ To execute

Inbox ⁚ **Menu button** ⁚ **Account** ⁚ **Menu button** ⁚ **Add an Account**

For information on how to set up an email account, see **"Setting up an email account"** on page 66-67.

Setting up your work email

You can receive information such as emails, your address book, and your schedule through the exchange server that is used at your work.

1 Enter an email address by tapping the email address box.

2 Enter the password in the password box, and then tap Next.

3 When the account type selection screen appears, choose Exchange.

To set up a POP3 or IMAP account, see **"Setting up an email account"** on page 66-67.

4 Enter the detailed information of the exchange server.

For further information on the server, contact the person who is in charge of the server.

5 Set the frequency of email checking and the number of emails to be synchronized, and then tap **Next**.

6 Set the name for your account and sent messages, and then tap **Next**.

Deleting an email account

■ To execute

Inbox ⁛ **Menu Button** ⁛ **Account** ⁛ Touch and hold on the name of the account to delete ⁛ **Delete the account**

Browser

You can access websites to search for information.

■ To execute

Home Screen ⁛ ⁛ **Browser**

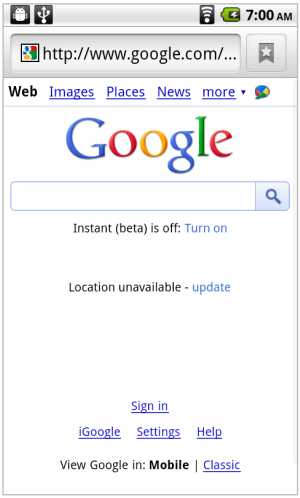

Press and hold down the **Menu button** to set the functions.

New Window	You can open a new web page.
Bookmark	You can check your bookmarks, frequently visited pages, and the browsing history.
Windows	You can check all the open web pages.
Refresh	You can update the current page to the last status.
Previous	You can go to the previous screen of the currently used web page.
Add a bookmark	You can add bookmarks to web pages.
Find on page	You can search for the texts you want within an open web page.
Select text	You can select, copy, and paste texts from an open web page.
Page info	You can view the information on an open web page.
Share page	You can share the page by Bluetooth or Gmail.
Download	You can view a list of the files that you downloaded from the Internet.
Settings	You can change the settings about the Internet.

- The files downloaded from the Internet are saved in the "sdcard/download" folder.
- The Flash Player is installed, so you can easily view the flash screens on the web pages.
- To use the Internet, your Wi-Fi should be connected. For further information on how to connect Wi-Fi, see **"Wireless & networks"** on page 73.
- When you receive a new email, appears at the top of the screen.

Camera

You can take pictures with the camera.

■ To execute

Home Screen Camera

You can set the shooting options while pressing the Menu button to take pictures.

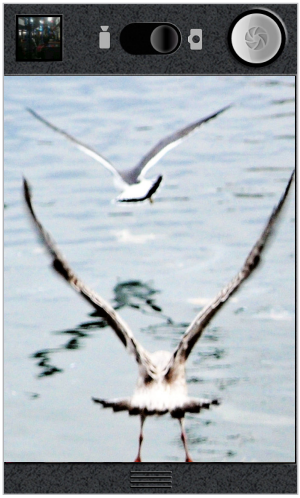

Settings

Wireless & networks
Sound
Display
Location & security
Applications
Account & sync
Privacy
SD card & device storage
Search
Select language
Android keyboard
Date & time
About system

Wireless & networks

You can change the wireless & network settings.

■ To execute

Home Screen ⁚ ⁚ **Settings** ⁚ **Wireless & networks** ⁚ Select the item you want, and then change the setting.

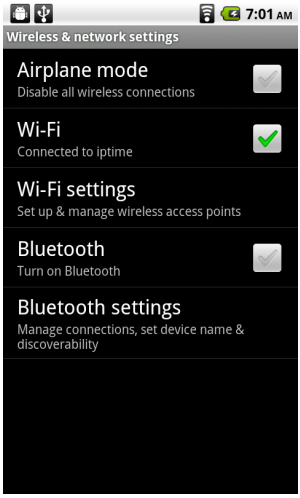

Airplane mode	You can disable all wireless connections.
Wi-Fi	You can turn on or off Wi-Fi.
Wi-Fi settings	You can set the network notification function. You can also select a Wi-Fi network from the Wi-Fi list or add a new one to the Wi-Fi list.
Bluetooth	You can turn on or off Bluetooth.
Bluetooth settings	You can set various functions, such as transferring data, to use Bluetooth. When Bluetooth is turned on, you can change the device names, set the search availability, and search for a device to connect.

- When an open Wi-Fi network is available, appears at the top of the screen.
- When the Wi-Fi network is connected, appears at the top of the screen.
- While Bluetooth is being connected, appears at the top of the screen.

Sound

You can change the settings of the sounds.

■ To execute

Home Screen ⁚ ⁚ **Settings** ⁚ **Sound** ⁚ Select the item you want, and then change the setting.

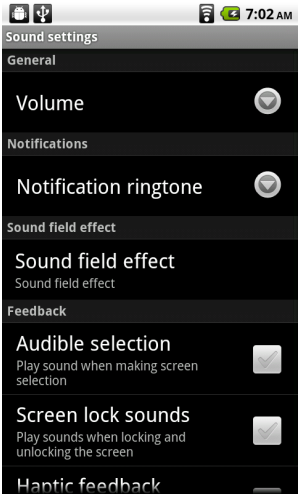

Volume	You can set the sound volume of Media, Alarm and Notification.
Notification ringtone	You can set notification sounds.
Audible selection	When selecting a screen, you can set the touch pad sounds to turn on or off.
Screen lock sounds	When locking or unlocking a screen, you can set the touch pad sounds to turn on or off.
Haptic feedback	You can set the vibrate when pressing soft keys and on certain UI interactions

Display

You can change the settings of the display.

■ To execute

Home Screen ⁛ ⁛ **Settings** ⁛ **Display** ⁛ Select the item you want, and then change the setting.

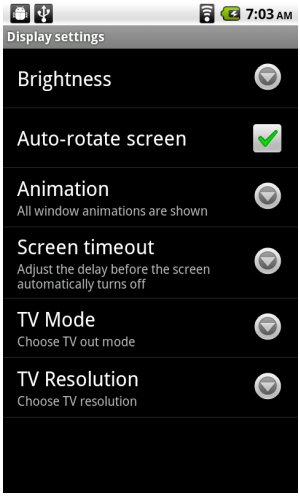

Brightness	You can set the brightness of the screen.
Auto-rotate screen	You can change the orientation of the screen by rotating your IDENTITY tab horizontally or vertically.
Animation	You can set the display of animations.
Screen timeout	You can adjust the interval of the Auto Screen Off time.
TV Mode	You can choose TV out mode.
TV Resolution	You can choose TV Resolution.

Location & security

You can set the settings of the location, date and time.

■ To execute

Home Screen ⁚ ⁚ Settings ⁚ Location & security ⁚ Select the item you want, and then change the setting.

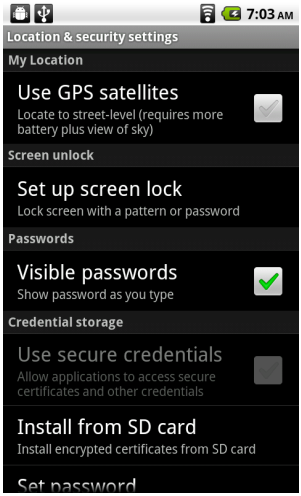
7:03 AM
Location & security settings
My Location
Use GPS satellites
Locate to street-level (requires more battery plus view of sky)
Screen unlock
Set up screen lock
Lock screen with a pattern or password
Passwords
Visible passwords
Show password as you type
Credential storage
Use secure credentials
Allow applications to access secure certificates and other credentials
Install from SD card
Install encrypted certificates from SD card
Set password

My location	Use GPS satellites	You can set whether to use the satellite global positioning system.
Screen unlock	Set up screen lock	You can set whether to lock screen with a pattern or password.
Passwords	Visible passwords	You can set whether to show password as you type.
Credential storage	Use secure credentials	You can set whether to use a security certification encrypted with your personal information to use electronic information systems, such as Internet banking.
	Install from SD card	You can install an encrypted certification that is necessary for using electronic information systems on your external memory card.
	Set password	You can set or change your PIN, which is necessary for using the security certification.
	Clear storage	You can delete all saved documents and the PIN.

Applications

You can manage the applications that are installed or are in use.

■ To execute

Home Screen ⁚ ⁚ **Settings** ⁚ **Applications** ⁚ Select the item you want, and then change the setting.

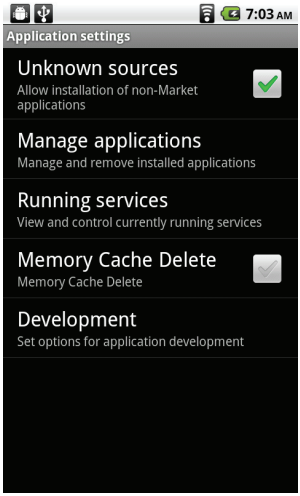

Unknown sources	You can set whether to install the applications that are not released yet or identified.
Manage applications	You can view the information on the installed application, and control the functions.
Running services	You can view the list of the running applications.
Memory Cache Delete	You can delete memory caches.
Development	**USB debugging**: When the USB cable is connected, you can set or cancel the function for executing the debugging mode. **Stay awake**: You can set or cancel the function for the screen to stay on while the battery is being charged. **Allow mock locations**: You can set or cancel the function for allowing a temporary location.

If you save or run any applications you downloaded from unidentified sources, your personal information may be divulged or abnormal symptoms may occur in your telecommunications services or basic operations. Wintec Industries shall not assume any responsibility for any loss or damage incurred from the aforementioned. If, therefore, abnormal symptoms occur, uninstall the applications immediately.

Account & Sync

You can change the detailed settings of the registered account, and add a new account.

■ To execute

Home Screen ⁚ ⁚ **Settings** ⁚ **Account & Sync** ⁚ Select the item you want, and then change the setting.

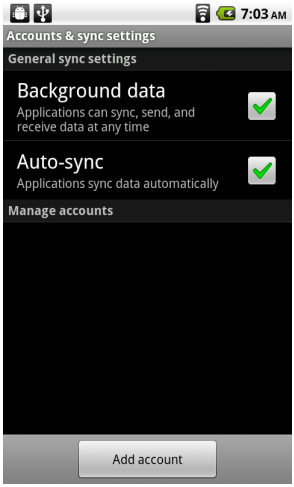

Background data	When you are not using the functions that need to be synchronized directly, you can allow a background data transmission.
Auto-sync	You can automatically set the synchronization of the set accounts.
Manage accounts	You can add, delete, change, or manage many email accounts.
Add account	You can add Exchange account and Goolgle account.

Privacy

■ To execute

Home Screen ⁚ ⁚ Settings ⁚ Privacy ⁚ Select the item you want, and then change the setting.

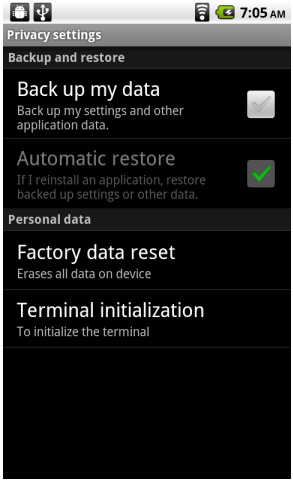
7:05 AM
Privacy settings
Backup and restore
Back up my data
Back up my settings and other application data.
Automatic restore
If I reinstall an application, restore backed up settings or other data.
Personal data
Factory data reset
Erases all data on device
Terminal initialization
To initialize the terminal

Back up my data	You can whether to back up my settings and other application data.
Automatic restore	When you reinstall an application, restore backed up settings or other data.
Factory data reset	All the data, such as the google account, system data, applications data, settings, and downloaded applications data are deleted. The files in the SD card are not deleted.
Terminal initialization	You can whether to initialize the terminal.

SD card & device storage

■ To execute

Home Screen ⁚ ⁚ Settings ⁚ SD card & device storage ⁚ Select the item you want, and then change the setting.

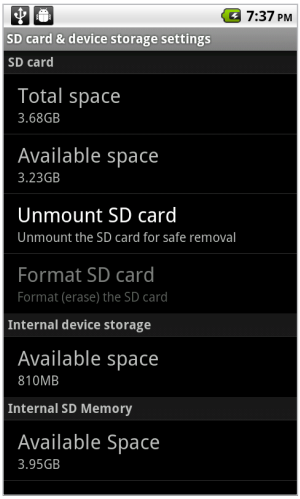

SD Card	Total space	You can check the total space of the SD card.
	Available space	You can check the available space of the SD card.
	Unmount SD card	When removing the SD card, you can prevent errors, such as data loss.
	Format SD card	You can initialize the SD card.
Internal memory	Available space	You can check the available space of the internal memory.
Internal SD Memory	Available space	You can check the available memory of the internal SD memory.

Search

You can set the search function while using Google.

■ To execute

Home Screen ⁚ ⁚ Settings ⁚ Search

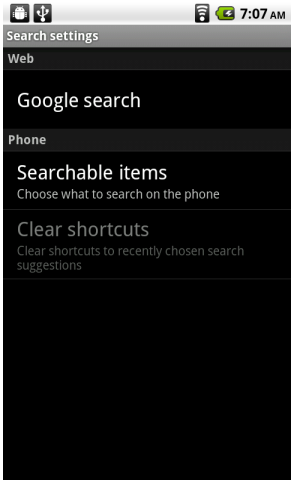

Web	**Google search**	You can set the function that suggests words at the bottom of the screen before you complete entering a full word.
Phone	**Searchable items**	You can set available search items using the quick search box.
	Clear shortcuts	You can delete the shortcuts of the latest search results.

Settings 81

Select language

You can set the text entry settings on the screen.

■ To execute

Home Screen ⁘ ⁘ Settings ⁘ Language & Keyboard ⁘ Select language

You can choose from among 8 languages the one that will be used on the device.

Android keyboard

You can set the text entry settings on the screen.

■ To execute

Home Screen ⁘ ⁘ Settings ⁘ Language & Keyboard ⁘ Android keyboard

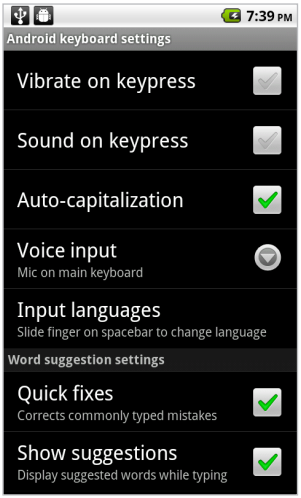

Android keyboard settings	Vibrate on keypress	Vibrates when the key on the keyboard is touched.
	Sound on keypress	Emits sound when the key on the keyboard is touched.
	Auto-capitalization	Capitalizes the first word of a sentence automatically.
	Voice input	You can select Mic on main keyboard.
	Input languages	You can whether to slide finger on spacebar to change language.
Word suggestion settings	Quick fixes	Corrects commonly typed mistakes.
	Show suggestions	Display suggested words while typing.
	Auto-complete	Spacebar and punctuation automatically insert highlighted word.

Date & Time

You can set the date and time automatically or manually.

■ To execute

Home Screen ⁚ ⁚ **Settings** ⁚ **Date & Time** ⁚ Select the item you want, and then change the setting.

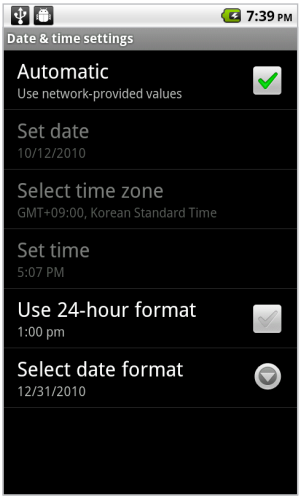

Automatic	You can set the time use network-provided values.
Set date	You can set the date manually.
Select time zone	You can select time zone manually.
Set time	You can set the time manually.
Use 24-hour format	You can set the display type of time.
Select date format	You can select the date format.

About system

You can check the system information, such as Network, Battery, and the legal information.

■ To execute

Home Screen > Settings > About system

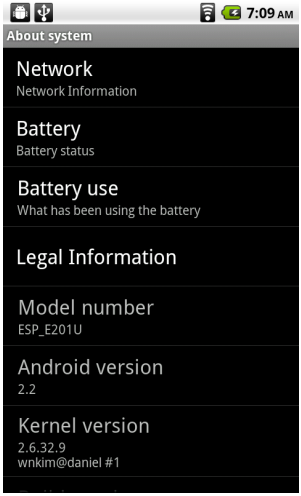

Index

Managing Data on IDENTITY tab
Specifications and Features
Copyright / Authentication / Trademark/ Exemption Clause
Internet Service Types
Troubleshooting
Warranty Statement and After-Sales Service
Index

Managing Data on IDENTITY tab

ConvergenceOne™ will help you manage your personal information easily. While using IDENTITY tab, the saved data may be lost due to malfunctions or failures of your IDENTITY tab. In order to prevent or to minimize any inconvenience incurred from such a loss, it is recommended that you back up your personal data on another device. Wintec Industries shall not assume any responsibility for the loss of your data.

Please visit the Enspert website for further information on the latest software information, the software upgrade method, and the management of personal information.

Specifications and Features

H/W	Color	Metal Silver	
	Dimension	Size	191.2 (W) * 130.5 (L) * 14.6 (H)
		Weight	425 g
	Operating Temperature	IDENTITY tab: 0°C ~40°C Charger: 0°C ~40°C	
	Operating Relative Humidity	5% ~95%	
	CPU	ARM Cortex-A8 1GHz	
	OS	Android Froyo	
	Display	7.0" 260K Color TFT LCD	
		Resolution	WVGA (800X480)
		Contrast level	Level 3
		Capacitive multi touch	Browser/ Map/ eBook Viewer/ Image
	Memory	8GB NAND Flash Memory/512MB System Memory	
	Network	Wi-Fi	IEEE 802.11 b/g/n
		Bluetooth	Bluetooth 2.1 + EDR
	GPS	Stand Alone GPS	
	Interface	micro-HDMI, USB mini B type, Ear/ Mic Jack(diameter 3.5 Ø), SD Card Slot	
	Sensor	G sensor, Light sensor, Digital Compass	
	Camera	3M Pixels	
	Battery	4100 mAh Li-polymer Battery Charge with the Mini USB	

S/W	Audio	Speaker	Built-in Stereo Speaker (above 1W x 2CH)
		Microphone	Built-in microphone
		Sound effects	SRS WOW HD
	E-Book	ePub	
	Image	JPG, BMP, PNG, GIF	
	Document	TXT, PDF, DOC, PPT, XLS	
	Codec	Video	H.264, H.263, Xvid, WMV9, MPEG4, AVI, ASP
		Audio	AAC, MP3, WMA3, AMR-NB/WB, AC3
		Image	JPG, BMP, PNG
	Basic applications	Internet Browser, Widget, Memo, Address Book	
ACC	Adapter	Rechargeable with a USB adapter	

Copyright / Authentication, Trademark / Exemption Clause

Copyright

Copyright© 2011 Wintec Industries. All rights reserved.
This User Manual is the property of Wintec Industries and is protected by copyright law.
This User Manual shall not be partially or wholly reproduced, distributed, translated or altered in an electronic or printed form without the written permission of Wintec Industries.
The companies, institutions, and products that were used as examples are not actual data.
It is not intended for these companies, institutions, products, persons, or incidents to be associated with Wintec Industries. Therefore, such an assumption should not be made.
It is the user's responsibility to follow the corresponding copyright laws.

Trademark

FileMate, FileMate logo, Wintec Industries, and the Wintec Industries logo are the trademarks of Wintec Industries.
The Android logo, Google Search, Voice Search, Map, Gmail, YouTube, Market, and Talk are the trademarks of Google Inc. Other company names and product names may be the trademarks of the corresponding companies.

WOW HD, SRS and the symbol are the trademarks of SRS Labs, Inc.

Exemption clause

Wintec Industries. shall not assume responsibility for accidental damage or damage incurred from the incorrect use and operation of IDENTITY tab. The information in the User Manual was written based on the specifications of the current product. Wintec Industries has been adding new functions and will also continue to apply new technologies. All the specifications are subject to change without prior notice.

Internet Service Types

In general, you need an Internet line to use the Internet. You can use all Internet lines, such as Internet line, dedicated lines, cable modems, and other Internet lines. Also, you can access Wi-Fi wireless Internet using Wi-Fi Multi.

Troubleshooting

LCD	No screen appears at all.	When the Internet is not connected or connected incorrectly, the screen may not display.	Check the Internet connection.
		When IDENTITY tab is selected in External Output Mode, the screen may not display.	Switch the External Output mode.
	Afterimages appear. Border lines appear.	When you watch the same screen for an extended length of time, afterimages appear. Have you played games for an extended length of time? Have you used the 4:3 screen for an extended length of time? The border lines on the left and right and at the top and bottom of the screen are fixed, or the penetration of light differs from each other. Therefore, if you watch the screen for an extended length of time, border lines appear.	The screen may cause permanent damage to the touchscreen. If a paused screen continues to be displayed when you are playing a game, afterimages may appear. The same screen may cause permanent damage to the pad screen. Failures incurred from the aforementioned are not covered in the warranty statement.
	The screen does not look clear.	The screen does not look clear under direct sunlight.	Use your IDENTITY tab in a shaded area or in a level of brightness where you can read a book.
Installation and Connection	No input power	You did not turn on the power switch.	Press the power switch to turn on.
		The battery is discharged completely.	Charge the battery.
	The battery is not charged.	The charger is not connected to IDENTITY tab.	Check if the USB charger is properly connected to IDENTITY tab.
	IDENTITY tab generates heat.	When using IDENTITY tab, a lot of current is required. As a result, if you talk on your IDENTITY tab, play games, or use the Internet for an extended length of time, it may generate heat.	This is neither a product failure, nor does it affect the lifetime or performance of your IDENTITY tab.

Installation and Connection	The screen is not displayed after an external device was connected.	When IDENTITY tab is not connected to an external device or connected incorrectly, the screen may not display.	Check if the external device is connected properly.
Menu	The menu is not selected	The menu is gray (deactivated).	The menus that are supported vary depending on the model. Check the model when checking the functions.
Other	Knocking sound from the product	This can happen due to the mechanical contraction or expansion of the exterior.	The knocking sound occurs when the product contracts or expands due to heat. Therefore, it is not a failure of the product and you can use the product safely.
	IDENTITY tab is dirty.	Foreign objects adhere to IDENTITY tab.	IDENTITY tab can be damaged if you wipe it with alcohol, benzene, or a synthetic detergent. Wipe your IDENTITY tab with a pencil eraser or a soft cloth.
	Data saved on IDENTITY tab has been deleted.	If the data was damaged due to the initialization or failures of IDENTITY tab, it cannot be recovered unless you have backup data.	Ensure that you back up the data on a safe external device at all times.
	The battery usage time (standby time) differs from the User Manual.	When you leave the charged battery at a low or high temperature, its usage time decreases. When using additional functions, such as entering text, playing games, or using the Internet, the battery consumption increases. The battery is a consumable part, so its lifespan decreases slowly.	Use IDENTITY tab at room temperature. End the applications when you are not using IDENTITY tab. When you are not using Bluetooth, Wi-Fi, or the GPS, turn them off.

Wi-Fi	The Internet is often disconnected.	The Internet connection may be delayed or may not be connected properly, depending on the wireless AP condition. If you use IDENTITY tab while you are moving, the wireless Internet service can become disconnected, depending on the wireless AP condition.	Move to another area and try again.
Camera	The quality of an image is not as good as the one on the preview screen.	The quality of an image is sensitive to the surrounding environments and can vary depending on the shooting technique. Lighting is insufficient in a dark place, at night, or indoors. As a result, noise may occur or you cannot focus the camera properly.	Take pictures in a bright area or where sufficient lighting is present.
GPS	You cannot find your location indoors.	You cannot properly receive GPS signals indoors.	Use a wireless network or use it outdoors.
Earphones	Only one side of the earphones works.	IDENTITY tab is optimized for 4-pin earphones.	Use the earphones that came with your IDENTITY tab. You can also buy 4-pin earphones if you want extra ones.

Due to the technical limitations of the manufacturing process, it can look brighter or darker by 1 PPM (1/1,000,000) on the LCD panel of IDENTITY tab. This does not affect the performance of IDENTITY tab at all. (The number of LCD panel pixels: 480,000 pixels).

Warranty Statement and After-Sales Service

A. EXTENT OF LIMITED WARRANTY

1. Enspert warrants hardware products against defects in materials and workmanship for a period of one year from date of purchase ("Warranty Period"). The customer is responsible for keeping all original proof of purchase documents during this time. Enspert will only accept purchase receipts from authorized resellers as proof of purchase. Receipts coming from credit card processing companies, including but not limited to PayPal, Authorizenet.com, Visa, Mastercard, Amex and Discovery, will not be accepted as proof of purchase.
2. Concerning software products, Enspert Limited Warranty applies only to a failure to execute programming instructions. Enspert does not guarantee the operation of any product will be uninterrupted or error free.
3. Enspert Limited Warranty covers only those defects which arise as a result of normal use of the product, and does not apply to:
    - Improper or inadequate maintenance or modification;
    - Software, interfacing, media, parts and supplies not provided or supported by Enspert; or
    - Operation outside the product's specifications.
4. If Enspert receives, during the applicable Warranty Period, notice of a defect in any hardware product, which is covered by Enspert's warranty, Enspert will either repair the product using new or refurbished replacement parts or replace the defective product with new or like-new product of the same model with the same functionality as the original unit. If Enspert is unable to repair or replace the defective product, the customer will either be offered a comparable model* (if available) or will be refunded the purchase price of the defective product. When a product is exchanged, any replacement item becomes the property of the customer and the replaced item becomes Enspert's property. (* whose functionality is at least equal to that of the product being replaced.)
5. Enspert shall have no obligation to replace or refund a defective product until the customer returns the defective product to Enspert.
6. Enspert is not responsible (i) for any data stored on returned products. Customers should backup his/her data prior to shipping the unit back to Enspert. Hard drives and devices which include a hard disk or other memory storage system will be reformatted during the repair process (even if the repair is not related to the hard drive itself) and will not include the customer's data when it is returned. (ii) for protecting the confidentiality of any data on a product sent in for repair.
7. Enspert ' limited warranty is only valid in the country of purchase.
8. The Enspert limited warranty is non-transferable. Enspert will not validate purchases made via trade, barter or auctions. This pertains to trade, barter or auction between individuals or between resellers and individuals on sites including but not limited to E-Bay and Ubid where trade, barter or auction transactions are facilitated.
9. Enspert does not warrant against damages incurred to the LCD screen. Devices

returned with broken LCD screens will be evaluated by an Enspert technician who will determine if such damage falls within the scope of product neglect or misuse and hence whether or not it is guaranteed.

10. The batteries in IDENTITY TAB products have a finite number of charge cycles and thus over its life span, the autonomy will slowly decrease. Enspert does not guaranty a specific battery charge retention time scale as degradation of battery autonomy includes variables beyond the control of Enspert, such as, but not limited to, how often you deplete and charge it, the temperature the device is used and/or charged at, and the amount of time that the device is used or not used between charges.
11. The LCD screens on IDENTITY TAB products may display pixel failures immediately or over time. Please refer the full PDF user manual of your product for information on your rights for replacement of a screen with multiple defective pixels.

B. LIMITATIONS OF WARRANTY

To the extent allowed by local law, neither Enspert nor its third party suppliers make any other warranty or condition of any kind, whether expressed or implied, with respect to the Enspert products, and specifically disclaim the implied warranties of conditions of merchantability, satisfactory quality, and fitness for a particular purpose.

C. LIMITATIONS OF LIABILITY

To the extent allowed by local law, the remedies provided in this Warranty Statement are the customer's sole and exclusive remedies. To the extent allowed by local law, except for the obligations specifically set forth in this warranty statement, in no event shall Enspert or its third party suppliers be liable for direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory and whether advised of the possibility of such damages.

D. LOCAL LAW

This Warranty Statement gives the customer specific legal rights. The customer may also have other rights that vary from state to state in the United States, from province to province in Canada. To the extent that this Warranty Statement is inconsistent with local law, this Warranty Statement shall be deemed modified to be consistent with such local law. Under such local law, certain disclaimers and limitations of this Warranty Statement may not apply to the customer. For example, some states in the United States as well as Canada may: preclude the disclaimers and limitations in this Warranty Statement from limiting the statutory rights of a consumer; restrict the ability of a manufacturer to enforce such disclaimers or limitations; or grant the customer additional warranty rights, specify the duration of implied warranties which the manufacturer cannot disclaim, or not allow limitations on the duration of implied warranties.

Index

A

About system 85
Accessories 32
Account 78
Address Book 45
Android keyboard 83
Application 19
Applications 77
Auto-sync 78

B

Battery 14
Bluetooth 73
Bookmark 70
Browser 70

C

Camera 71
Clock 56
ConvergenceOne™ 60
Copy 58
Credential storage 76

D

Date 84
Delete 58
Development 77

E

Email 66
Ending Applications 55
External Devices 34

F

Factory data reset 79
File Manager 58
Firmware 87

G

Gallery 44, 48
Google search 81, 83

H

Home 18
Home Button 12

I

Icons 21
Internal memory 80
Internet 70

K

Keyboard 26

M

Memory 80
Menu 18
Menu Button 12
Move 58
mp3 52
Music 51
My Album 53
My location 76

O

Optional components 11

P

passwords 76
Photo 53
Power Button 18
Previous 18
Previous Button 12
Privacy 79

Q

Quick fixes 83
QWERTY keypad 26

R

Reset Button 18
Resetting 18

S

Scroll bar 28
SD card 33
SD Card 80
Search 81
Select Language 82
Service info. 58
Settings 72
Slideshow 54
Speakers 12
SRS WOW HD 31
Status bar 19
Stay awake 77
Sync 78

T

Task Manager 55
ThinkFree Office 57
Time 84
Touchscreen 12, 22, 23, 24, 25
Twitter 59

V

Video 50
Volume 18, 31

W

Wallpaper 19
Wi-Fi 73

IDENTITY

tab

FILEMATE®